Manual

AUTOMATION



WAGO-I/O-SYSTEM 750

16DI 24VDC 3.0ms

750-1405

16-Channel Digital Input Module 24 V DC, High-side switching

Version 1.1.0

WAGO®
INNOVATIVE CONNECTIONS

© 2013 by WAGO Kontakttechnik GmbH & Co. KG
All rights reserved.

WAGO Kontakttechnik GmbH & Co. KG

Hansastraße 27
D-32423 Minden

Phone: +49 (0) 571/8 87 – 0
Fax: +49 (0) 571/8 87 – 1 69

E-Mail: info@wago.com

Web: http://www.wago.com

Technical Support

Phone: +49 (0) 571/8 87 – 5 55
Fax: +49 (0) 571/8 87 – 85 55

E-Mail: support@wago.com

Every conceivable measure has been taken to ensure the accuracy and completeness of this documentation. However, as errors can never be fully excluded, we always appreciate any information or suggestions for improving the documentation.

E-Mail: documentation@wago.com

We wish to point out that the software and hardware terms as well as the trademarks of companies used and/or mentioned in the present manual are generally protected by trademark or patent.

Table of Contents

Table of Contents ... 3

1 Notes about this Documentation ... 5
1.1 Validity of this Documentation ... 5
1.2 Copyright ... 5
1.3 Symbols ... 6
1.4 Number Notation ... 8
1.5 Font Conventions ... 8

2 Important Notes ... 9
2.1 Legal Bases ... 9
2.1.1 Subject to Changes ... 9
2.1.2 Personnel Qualifications ... 9
2.1.3 Use of the 750 Series in Compliance with Underlying Provisions ... 9
2.1.4 Technical Condition of Specified Devices ... 10
2.2 Safety Advice (Precautions) ... 11

3 Device Description ... 13
3.1 View ... 15
3.2 Connectors ... 16
3.2.1 Data Contacts/Internal Bus ... 16
3.2.2 Power Jumper Contacts/Field Supply ... 17
3.2.3 CAGE CLAMP® Connectors ... 19
3.3 Display Elements ... 20
3.4 Operating Elements ... 20
3.5 Schematic Diagram ... 21
3.6 Technical Data ... 22
3.6.1 Device data ... 22
3.6.2 Communication ... 22
3.6.3 Supply ... 22
3.6.4 Inputs ... 22
3.6.5 Wire Connection ... 23
3.7 Approvals ... 24
3.8 Standards and Guidelines ... 25

4 Mounting ... 26
4.1 Mounting Sequence ... 26
4.2 Inserting and Removing Devices ... 27
4.2.1 Inserting I/O Module ... 27
4.2.2 Removing the I/O Module ... 28

5 Connect Devices ... 29
5.1 Connecting a conductor to the CAGE CLAMP® S ... 29

6 Process Image ... 30

7 Use in Hazardous Environments ... 31
7.1 Marking Configuration Examples ... 32
7.1.1 Marking for Europe according to ATEX and IEC-Ex ... 32
7.1.2 Marking for America according to NEC 500 ... 37

7.2 Installation Regulations 38
7.2.1 Special conditions for safe use (ATEX Certificate TÜV 07 ATEX 554086 X) 39
7.2.2 Special conditions for safe use (ATEX Certificate TÜV 12 ATEX 106032 X) 40
7.2.3 Special conditions for safe use (IEC-Ex Certificate TUN 09.0001 X) 41
7.2.4 Special conditions for safe use (IEC-Ex Certificate IECEx TUN 12.0039 X) 42
7.2.5 ANSI/ISA 12.12.01 43

List of Figures 44

List of Tables 45

1 Notes about this Documentation



Note

Keep this documentation!
The operating instructions are part of the product and shall be kept for the entire lifetime of the device. They shall be transferred to each subsequent owner or user of the device. Care must also be taken to ensure that any supplement to these instructions are included, if applicable.

1.1 Validity of this Documentation

This documentation is only applicable to the I/O module 750-1405 (16DI 24VDC 3.0ms) of the WAGO-I/O-SYSTEM 750 series.

The I/O module 750-1405 shall only be installed and operated according to the instructions in this manual and in the manual for the used fieldbus coupler/controller.

NOTICE

Consider power layout of the WAGO-I/O-SYSTEM 750!
In addition to these operating instructions, you will also need the manual for the used fieldbus coupler/controller, which can be downloaded at www.wago.com. There, you can obtain important information including information on electrical isolation, system power and supply specifications.

1.2 Copyright

This Manual, including all figures and illustrations, is copyright-protected. Any further use of this Manual by third parties that violate pertinent copyright provisions is prohibited. Reproduction, translation, electronic and phototechnical filing/archiving (e.g., photocopying) as well as any amendments require the written consent of WAGO Kontakttechnik GmbH & Co. KG, Minden, Germany. Non-observance will involve the right to assert damage claims.

1.3 Symbols

DANGER

Personal Injury!
Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.



DANGER

Personal Injury Caused by Electric Current!
Indicates a high-risk, imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Personal Injury!
Indicates a moderate-risk, potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Personal Injury!
Indicates a low-risk, potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

NOTICE

Damage to Property!
Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.



NOTICE

Damage to Property Caused by Electrostatic Discharge (ESD)!
Indicates a potentially hazardous situation which, if not avoided, may result in damage to property.



Note

Important Note!
Indicates a potential malfunction which, if not avoided, however, will not result in damage to property.



Information

Additional Information:
Refers to additional information which is not an integral part of this documentation (e.g., the Internet).

1.4 Number Notation

Table 1: Number notation

Number code	Example	Note
Decimal	100	Normal notation
Hexadecimal	0x64	C notation
Binary	'100' '0110.0100'	In quotation marks, nibble separated with dots (.)

1.5 Font Conventions

Table 2: Font conventions

Font type	Indicates
italic	Names of paths and data files are marked in italic-type. e.g.: *C:\Programme\WAGO-I/O-CHECK*
Menu	Menu items are marked in bold letters. e.g.: **Save**
>	A greater-than sign between two names means the selection of a menu item from a menu. e.g.: **File** > **New**
Input	Designation of input or optional fields are marked in bold letters, e.g.: **Start of measurement range**
“Value”	Input or selective values are marked in inverted commas. e.g.: Enter the value “4 mA” under **Start of measurement range**.
[Button]	Pushbuttons in dialog boxes are marked with bold letters in square brackets. e.g.: **[Input]**
[Key]	Keys are marked with bold letters in square brackets. e.g.: **[F5]**

2 Important Notes

This section includes an overall summary of the most important safety requirements and notes that are mentioned in each individual section. To protect your health and prevent damage to devices as well, it is imperative to read and carefully follow the safety guidelines.

2.1 Legal Bases

2.1.1 Subject to Changes

WAGO Kontakttechnik GmbH & Co. KG reserves the right to provide for any alterations or modifications that serve to increase the efficiency of technical progress. WAGO Kontakttechnik GmbH & Co. KG owns all rights arising from the granting of patents or from the legal protection of utility patents. Third-party products are always mentioned without any reference to patent rights. Thus, the existence of such rights cannot be excluded.

2.1.2 Personnel Qualifications

All sequences implemented on Series 750 devices may only be carried out by electrical specialists with sufficient knowledge in automation. The specialists must be familiar with the current norms and guidelines for the devices and automated environments.

All changes to the coupler or controller should always be carried out by qualified personnel with sufficient skills in PLC programming.

2.1.3 Use of the 750 Series in Compliance with Underlying Provisions

Couplers, controllers and I/O modules found in the modular WAGO-I/O-SYSTEM 750 receive digital and analog signals from sensors and transmit them to the actuators or higher-level control systems. Using programmable controllers, the signals can also be (pre-) processed.

The components have been developed for use in an environment that meets the IP20 protection class criteria. Protection against finger injury and solid impurities up to 12.5 mm diameter is assured; protection against water damage is not ensured. Unless otherwise specified, operation of the components in wet and dusty environments is prohibited.

Operating 750 Series components in home applications without further measures is only permitted if they meet the emission limits (emissions of interference) according to EN 61000-6-3. You will find the relevant information in the section on "WAGO-I/O-SYSTEM 750" → "System Description" → "Technical Data" in the manual for the used fieldbus coupler/controller.

Appropriate housing (per 94/9/EG) is required when operating the WAGO-I/O-SYSTEM 750 in hazardous environments. Please note that a prototype test certificate must be obtained that confirms the correct installation of the system in a housing or switch cabinet.

2.1.4 Technical Condition of Specified Devices

The components to be supplied Ex Works, are equipped with hardware and software configurations, which meet the individual application requirements. WAGO Kontakttechnik GmbH & Co. KG will be exempted from any liability in case of changes in hardware or software as well as to non-compliant usage of components.

Please send your request for modified and new hardware or software configurations directly to WAGO Kontakttechnik GmbH & Co. KG.

2.2 Safety Advice (Precautions)

For installing and operating purposes of the relevant device to your system the following safety precautions shall be observed:



DANGER

Do not work on components while energized!
All power sources to the device shall be switched off prior to performing any installation, repair or maintenance work.

DANGER

Installation only in appropriate housings, cabinets or in electrical operation rooms!
The WAGO-I/O-SYSTEM 750 and its components are an open system. As such, install the system and its components exclusively in appropriate housings, cabinets or in electrical operation rooms. Allow access to such equipment and fixtures to authorized, qualified staff only by means of specific keys or tools.

NOTICE

Replace defective or damaged devices!
Replace defective or damaged device/module (e.g., in the event of deformed contacts), since the long-term functionality of device/module involved can no longer be ensured.

NOTICE

Protect the components against materials having seeping and insulating properties!
The components are not resistant to materials having seeping and insulating properties such as: aerosols, silicones and triglycerides (found in some hand creams). If you cannot exclude that such materials will appear in the component environment, then install the components in an enclosure being resistant to the above-mentioned materials. Clean tools and materials are imperative for handling devices/modules.

NOTICE

Cleaning only with permitted materials!
Clean soiled contacts using oil-free compressed air or with ethyl alcohol and leather cloths.

NOTICE

Do not use any contact spray!
Do not use any contact spray. The spray may impair contact area functionality in connection with contamination.

NOTICE

Do not reverse the polarity of connection lines!
Avoid reverse polarity of data and power supply lines, as this may damage the devices involved.



NOTICE

Avoid electrostatic discharge!
The devices are equipped with electronic components that you may destroy by electrostatic discharge when you touch. Pay attention while handling the devices to good grounding of the environment (persons, job and packing).

3 Device Description

The digital input module 750-1405 receives control signals from digital field (e.g. of sensors, transmitters, switches or proximity switches).

The I/O module has 16 input channels, providing a direct connection to 1-wire sensors.
The input signals are connected to the CAGE CLAMP® connections DI 1 ... DI 16.
The assignment of the connections is described in the "Connections" section.

Note

Use field side connection modules!
Where required, use the appropriate field side connection modules for power supply to the sensors.

Each input channel has an RC noise rejection filter with a time constant of 3.0 ms.

The I/O module inputs provide high-side switching. If the 24V potential for field power is switched to an input connection, the signal status for the corresponding input channel is set to "high."

A green LED indicates the switched status of each channel.
The meaning of the LEDs is described in the “Display Elements” section.

The I/O module receives the 24V voltage supply for the field level from an upstream I/O module or from the fieldbus coupler/controller via the power contacts used as blade contacts. It then provides this potential to subsequent I/O modules via the power contacts used as spring contacts.

NOTICE

Do not exceed maximum current via power contacts!
The maximum current to flow through the power contacts is 10 A.
Greater currents can damage the power contacts.
When configuring the system, ensure that this current is not exceeded. If exceeded, an additional potential feed module must be used.

Note

Use potential feed module for Ground (earth)!
The I/O module has no power contacts for PE intake and transfer. Use a potential feed module when a PE feed is needed for the subsequent I/O modules.

The field voltage and the system voltage are electrically isolated from each other.

With consideration of the power jumper contacts, the individual modules can be arranged in any combination when configuring the fieldbus node. An arrangement in groups within the group of potentials is not necessary.

The I/O module 750-1405 can be used with all fieldbus couplers/controllers of the WAGO-I/O-SYSTEM 750.

3.1 View

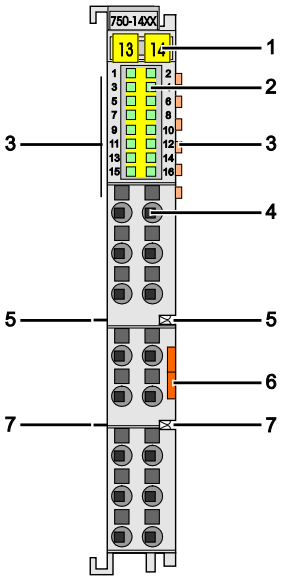


Figure 1: View

Table 3: Caption acc. to figure “View”

No.	Designation	Description	Details see chapter
1	---	Marking possibility with Mini-WSB	---
2	1 … 16	Status-LEDs Inputs DI 1 … DI 16	“Device description” > “Display elements”
3	---	Data contacts	“Mounting” > ”Mounting device”
4	1 … 16	CAGE CLAMP®-supplies Inputs DI 1 … DI 16	“Device description” > ”Connections”
5	---	Power jumper contacts +24 V	“Device description” > ”Connections”
6	---	Release clip	“Mounting” > “Mounting device”
7	---	Power jumper contacts 0 V	“Device description” > ”Connections”

3.2 Connectors

3.2.1 Data Contacts/Internal Bus

Communication between the coupler/controller and the I/O modules as well as the system supply of the I/O modules is carried out via the internal bus. It is comprised of 6 data contacts, which are available as self-cleaning gold spring contacts.



Figure 2: Data contacts

NOTICE

Do not place the I/O modules on the gold spring contacts!
Do not place the I/O modules on the gold spring contacts in order to avoid soiling or scratching!

NOTICE

Ensure that the environment is well grounded!
The modules are equipped with electronic components that may be destroyed by electrostatic discharge. When handling the modules, ensure that the environment (persons, workplace and packing) is well grounded. Avoid touching conductive components, e.g. data contacts.

3.2.2 Power Jumper Contacts/Field Supply

⚠ CAUTION

Risk of injury due to sharp-edged male contacts!
The male contacts are sharp-edged. Handle the module carefully to prevent injury.

The I/O module 750-1405 has 2 self-cleaning power jumper contacts that supply and transmit power for the field side. The contacts on the left side of the I/O module are designed as male contacts and the contacts on the right side as spring contacts.

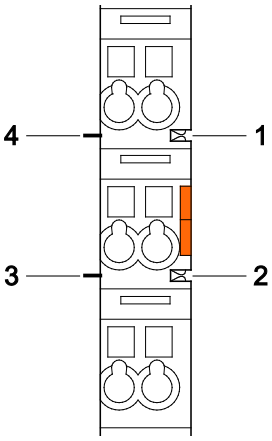


Figure 3: Power jumper contacts

Table 4: Caption acc. to view “Power jumper contacts”

Connector	Type	Function
1	Spring contact	Forwarding of the field supply voltage (U_v)
2	Spring contact	Forwarding of the field supply voltage (0 V)
3	Blade contact	Infeed of the field supply voltage (0 V)
4	Blade contact	Infeed of the field supply voltage (U_v)

NOTICE

Do not exceed maximum current via power contacts!
The maximum current to flow through the power contacts is 10 A.
Greater currents can damage the power contacts.
When configuring the system, ensure that this current is not exceeded. If exceeded, an additional potential feed module must be used.



Note

Use potential feed module for Ground (earth)!
The I/O module has no power contacts for PE intake and transfer. Use a potential feed module when a PE feed is needed for the subsequent I/O modules.

3.2.3 CAGE CLAMP® Connectors

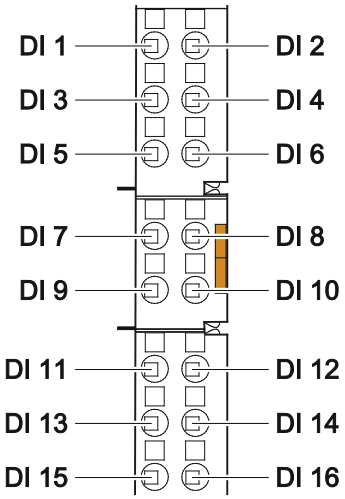


Figure 4: Connections

Table 5: Caption acc. to figure „Connections“

Connection	Channel	Designation	Function
1	1	Input DI 1	Input DI 1: Signal voltage
2	2	Input DI 2	Input DI 2: Signal voltage
			. . .
15	15	Input DI 15	Input DI 15: Signal voltage
16	16	Input DI 16	Input DI 16: Signal voltage

3.3 Display Elements

Table 6: Display Elements

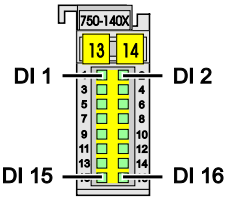


Figure 5: Display elements

LED	Channel	Designation	State	Function
1	1	State DI 1	off	Input DI 1: Signal voltage (0)
			green	Input DI 1: Signal voltage (1)
2	2	State DI 2	off	Input DI 2: Signal voltage (0)
			green	Input DI 2: Signal voltage (1)
. . .				
15	15	State DI 15	off	Input DI 15: Signal voltage (0)
			green	Input DI 15: Signal voltage (1)
16	16	State DI 16	off	Input DI 16: Signal voltage (0)
			green	Input DI 16: Signal voltage (1)

3.4 Operating Elements

The I/O module 750-1405 has no operating elements.

3.5 Schematic Diagram

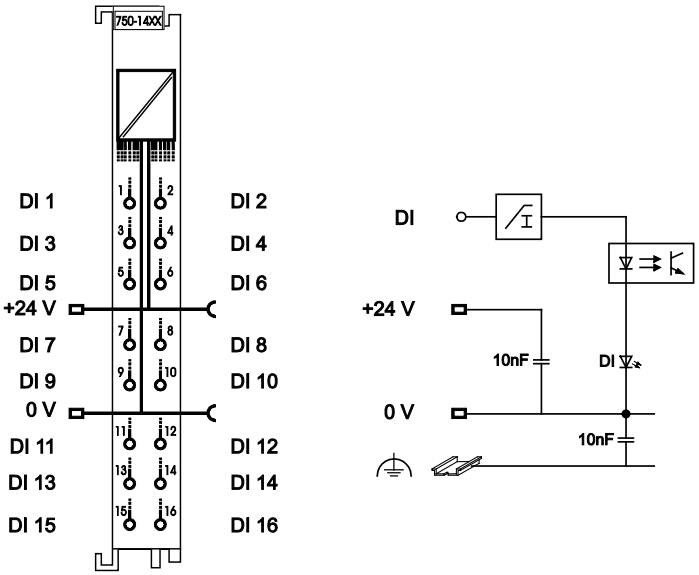


Figure 6: Schematic diagram

3.6 Technical Data

3.6.1 Device data

Table 7: Technical data device

Width	12 mm
Height (from upper edge of 35 DIN rail)	67 mm
Depth	100 mm
Weight	50 g
Storage temperature	-20 °C ... +85 °C
Operating temperature	0 °C ... +55 °C

3.6.2 Communication

Table 8: Technical data communication

Bit width	16 bits

3.6.3 Supply

Table 9: Technical data supply

Voltage supply	Via system supply (internal bus) and power jumper contacts
Supply voltage (Uv) Field supply	DC 24 V (-25 % ... +30 %)
Current consumption Field supply	---
Current consumption System supply	approx. 25 mA
Isolation System/Supply	500 V

3.6.4 Inputs

Table 10: Technical data inputs

No. of inputs	16
Input type	Type 1 (IEC 61131-2), high-side switching
Input signal „0“	DC -3 V ... +5 V
Input signal „1“	DC +15 V ... +30 V
Input current „0“	+0.6 mA
Input current „1“	+2.1 mA ... +2.4 mA
Input filter	3.0 ms
Delay time „0“ > „1“	3 ms
Delay time „1“ > „0“	4 ms

3.6.5 Wire Connection

Table 11: Technical Data Wire Connection

Wire connection	CAGE CLAMP® S
Cross section	0.08 mm²... 1.5 mm² / AWG 28 ... 16
Stripped lengths	8 mm... 9 mm / 0.33 in

3.7 Approvals

Information

More Information about Approvals
Detailed references to the approvals are listed in the document "Overview Approvals **WAGO-I/O-SYSTEM 750**", which you can find via the internet under: www.wago.com → Documentation → WAGO-I/O-SYSTEM 750 → System Description.

The following approvals have been granted to 750-1405 I/O modules:

Conformity Marking

$_{C}UL_{US}$ UL508

The following Ex approvals have been granted to 750-1405 I/O modules:

TÜV 07 ATEX 554086 X

I M2 Ex d I Mb
II 3 G Ex nA IIC T4 Gc
II 3 D Ex tc IIIC T135°C Dc

Ambient temperature range: 0 °C ≤ T_a ≤ +60 °C

IECEx TUN 09.0001 X

Ex d I Mb
Ex nA IIC T4 Gc
Ex tc IIIC T135°C Dc

Ambient temperature range: 0 °C ≤ T_a ≤ +60 °C

$_{C}UL_{US}$ ANSI/ISA 12.12.01

Class I, Div2 ABCD T4

The following ship approvals have been granted to 750-1405 I/O modules:

ABS (American Bureau of Shipping)

Federal Maritime and Hydrographic Agency

BV (Bureau Veritas)

DNV (Det Norske Veritas) Class B

	GL (Germanischer Lloyd)	Cat. A, B, C, D (EMC 1)
	KR (Korean Register of Shipping)	
	LR (Lloyd’s Register)	Env. 1, 2, 3, 4
	NKK (Nippon Kaiji Kyokai)	
	PRS (Polski Rejestr Statków)	
	RINA (Registro Italiano Navale)	

3.8 Standards and Guidelines

750-1405 I/O modules meet the following requirements on emission and immunity of interference:

EMC CE-Emission of interference	acc. to EN 61000-6-3: 2007
EMC CE-Immunity to interference	acc. to EN 61000-6-2: 2005
EMC marine applications-Emission of interference	acc. to Germanischer Lloyd (2003)
EMC marine applications-Immunity to interference	acc. to Germanischer Lloyd (2003)

4 Mounting

4.1 Mounting Sequence

All system components can be snapped directly on a carrier rail in accordance with the European standard EN 50022 (DIN 35).

The reliable positioning and connection is made using a tongue and groove system. Due to the automatic locking, the individual components are securely seated on the rail after installation.

Starting with the coupler/controller, the I/O modules are mounted adjacent to each other according to the project design. Errors in the design of the node in terms of the potential groups (connection via the power contacts) are recognized, as the I/O modules with power contacts (male contacts) cannot be linked to I/O modules with fewer power contacts.

⚠ CAUTION

Risk of injury due to sharp-edged male contacts!
The male contacts are sharp-edged. Handle the module carefully to prevent injury.

NOTICE

Connect the I/O modules in the required order!
Never plug I/O modules from the direction of the end terminal. A ground wire power contact, which is inserted into a terminal without contacts, e.g. a 4-channel digital input module, has a decreased air and creepage distance to the neighboring contact in the example DI4.

NOTICE

Assemble the I/O modules in rows only if the grooves are open!
Please take into consideration that some I/O modules have no or only a few power jumper contacts. The design of some modules does not allow them to be physically assembled in rows, as the grooves for the male contacts are closed at the top.



Note

Don't forget the end module!
Always plug an end module 750-600 onto the end of the fieldbus node! You must always use an end module at all fieldbus nodes with the WAGO I/O System 750 fieldbus couplers/controllers to guarantee proper data transfer.

4.2 Inserting and Removing Devices

DANGER

Use caution when interrupting the PE!
Make sure that people or equipment are not placed at risk when removing an I/O module and the associated PE interruption. To prevent interruptions, provide ring feeding of the ground conductor, see section "Grounding/Ground Conductor" in manual "System Description WAGO-I/O-SYSTEM 750".

NOTICE

Perform work on devices only if the system is de-energized!
Working on devices when the system is energized can damage the devices. Therefore, turn off the power supply before working on the devices.

4.2.1 Inserting I/O Module

1. Position the I/O module so that the tongue and groove joints to the fieldbus coupler/controller or to the previous or possibly subsequent I/O module are engaged.

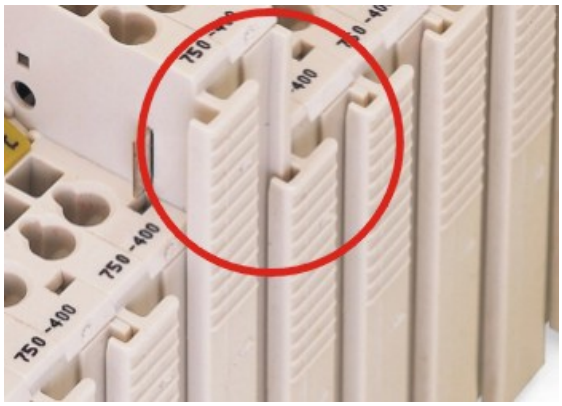


Figure 7: Insert I/O module

2. Press the I/O module into the assembly until the I/O module snaps into the carrier rail.

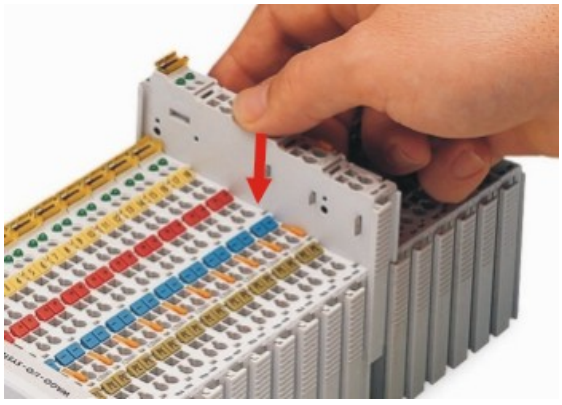


Figure 8: Snap the I/O module into place

With the I/O module snapped in place, the electrical connections for the data contacts and power contacts (if any) to the fieldbus coupler/controller or to the previous or possibly subsequent I/O module are established.

4.2.2 Removing the I/O Module

1. Remove the I/O module from the assembly by pulling the release tab.

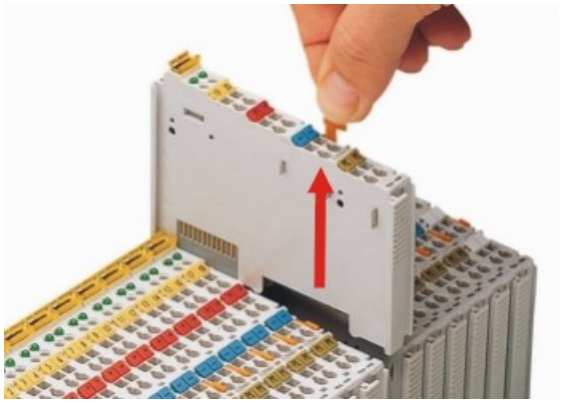


Figure 9: Removing the I/O module

Electrical connections for data or power contacts are disconnected when removing the I/O module.

5 Connect Devices

5.1 Connecting a conductor to the CAGE CLAMP® S

The WAGO CAGE CLAMP® S connection is appropriate for solid, stranded and finely stranded conductors.

Note

Only connect one conductor to each CAGE CLAMP® S connection!
Only one conductor may be connected to each CAGE CLAMP® S connection.
Do not connect more than one conductor at one single connection!

If more than one conductor must be routed to one connection, these must be connected in an up-circuit wiring assembly, for example using WAGO feed-through terminals.

Terminate both solid and stranded or ferruled conductors by simply pushing them in - no tool required. For all other types of conductors, CAGE CLAMP® S must be opened for connection with an operating tool with a 2.5 mm blade (order no. 210-719).

1. To open the CAGE CLAMP® S insert the actuating tool into the opening above the connection.
2. Insert the conductor into the corresponding connection opening.
3. To close the CAGE CLAMP® S simply remove the tool - the conductor is then clamped firmly in place.

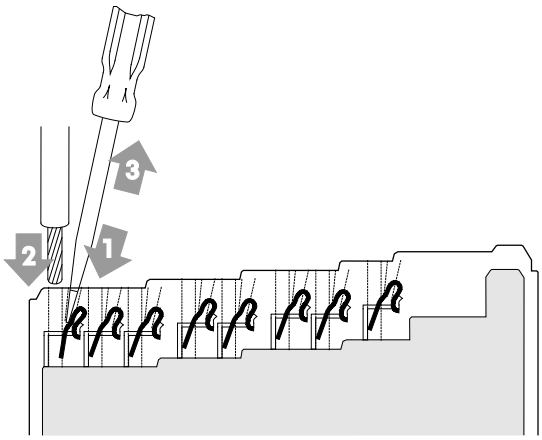


Figure 10: Connecting a conductor to a CAGE CLAMP® S

6 Process Image

Table 12: Input bits 0 … 7

Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
DI 8	DI 7	DI 6	DI 5	DI 4	DI 3	DI 2	DI 1

DI 1	Signal state DI 1 – Digital input channel 1
DI 2	Signal state DI 2 – Digital input channel 2
DI 3	Signal state DI 3 – Digital input channel 3
DI 4	Signal state DI 4 – Digital input channel 4
DI 5	Signal state DI 5 – Digital input channel 5
DI 6	Signal state DI 6 – Digital input channel 6
DI 7	Signal state DI 7 – Digital input channel 7
DI 8	Signal state DI 8 – Digital input channel 8

Table 13: Input bits 8 … 15

Bit 15	Bit 14	Bit 13	Bit 12	Bit 11	Bit 10	Bit 9	Bit 8
DI 16	DI 15	DI 14	DI 13	DI 12	DI 11	DI 10	DI 9

DI 9	Signal state DI 9 – Digital input channel 9
DI 10	Signal state DI 10 – Digital input channel 10
DI 11	Signal state DI 11 – Digital input channel 11
DI 12	Signal state DI 12 – Digital input channel 12
DI 13	Signal state DI 13 – Digital input channel 13
DI 14	Signal state DI 14 – Digital input channel 14
DI 15	Signal state DI 15 – Digital input channel 15
DI 16	Signal state DI 16 – Digital input channel 16

7 Use in Hazardous Environments

The **WAGO-I/O-SYSTEM 750** (electrical equipment) is designed for use in Zone 2 hazardous areas.

The following sections include both the general identification of components (devices) and the installation regulations to be observed. The individual subsections of the "Installation Regulations" section must be taken into account if the I/O module has the required approval or is subject to the range of application of the ATEX directive.

7.1 Marking Configuration Examples

7.1.1 Marking for Europe according to ATEX and IEC-Ex

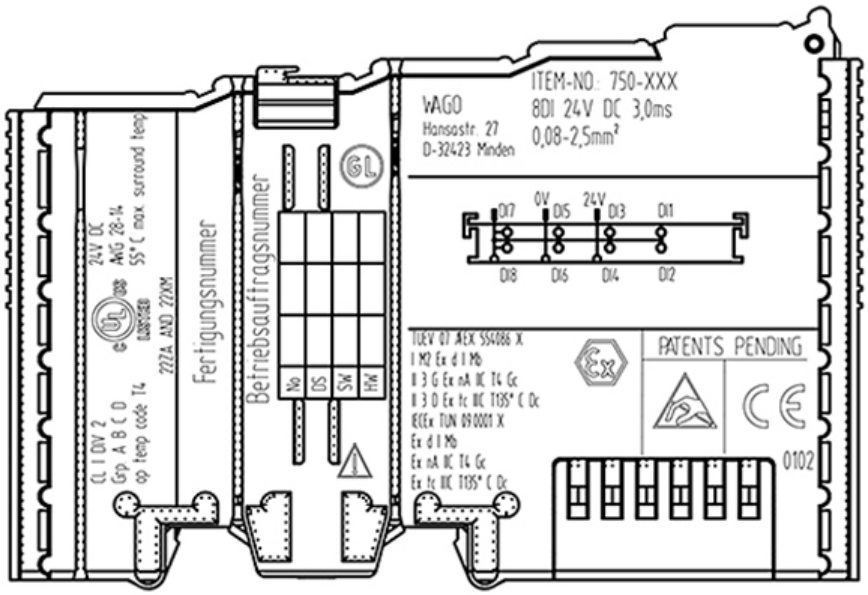


Figure 11: Side marking example for approved I/O modules according to ATEX and IECEx

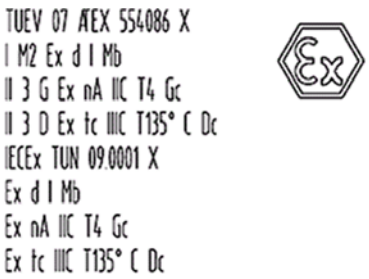


Figure 12: Printing Text detail – Marking example for approved I/O modules according to ATEX and IECEx.

Table 14: Description of marking example for approved I/O modules according to ATEX and IECEx

Printing on Text	Description
TÜV 07 ATEX 554086 X IECEx TUN 09.0001 X	Approving authority and certificate numbers
Dust	
II	Equipment group: All except mining
3D	Category 3 (Zone 22)
Ex	Explosion protection mark
tc Dc	Type of protection and equipment protection level (EPL):protection by enclosure
IIIC	Explosion group of dust
T 135°C	Max. surface temperature of the enclosure (without a dust layer)
Mining	
I	Equipment group: Mining
M2	Category: High level of protection
Ex	Explosion protection mark
d Mb	Type of protection and equipment protection level (EPL): Flameproof enclosure
I	Explosion group for electrical equipment for mines susceptible to firedamp
Gases	
II	Equipment group: All except mining
3G	Category 3 (Zone 2)
Ex	Explosion protection mark
nA Gc	Type of protection and equipment protection level (EPL): Non-sparking equipment
nC Gc	Type of protection and equipment protection level (EPL): Sparking apparatus with protected contacts. A device which is so constructed that the external atmosphere cannot gain access to the interior
IIC	Explosion group of gas and vapours
T4	Temperature class: Max. surface temperature 135°C

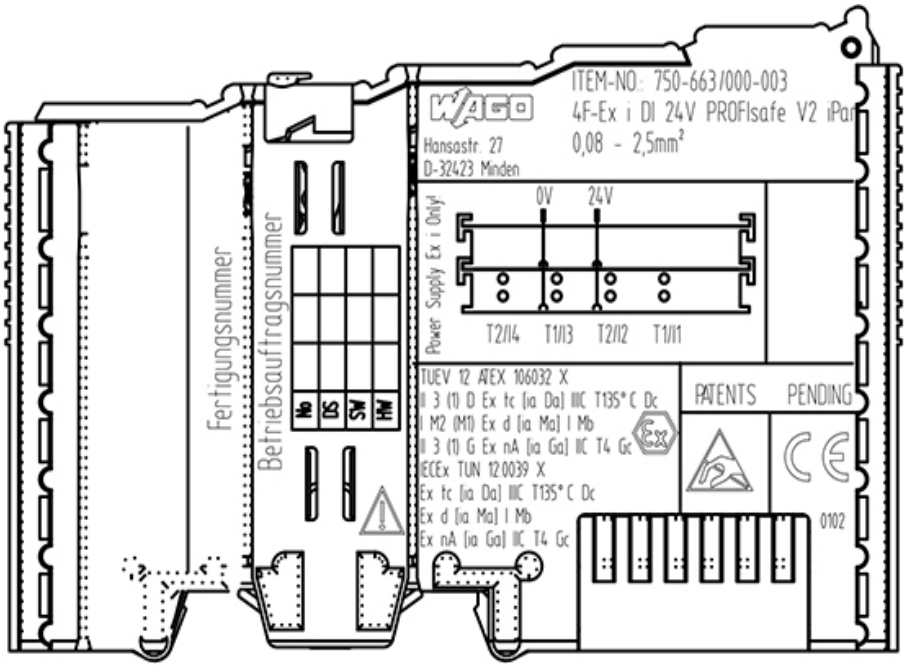


Figure 13: Side marking example for approved Ex i I/O modules according to ATEX and IECEx.

TUEV 12 ATEX 106032 X
II 3 (1) D Ex tc [ia Da] IIIC T135° C Dc
I M2 (M1) Ex d [ia Ma] I Mb
II 3 (1) G Ex nA [ia Ga] IIC T4 Gc
IECEx TUN 12.0039 X
Ex tc [ia Da] IIIC T135° C Dc
Ex d [ia Ma] I Mb
Ex nA [ia Ga] IIC T4 Gc

Figure 14: Text detail – Marking example for approved Ex i I/O modules according to ATEX and IECEx.

Table 15: Description of marking example for approved Ex i I/O modules according to ATEX and IECEx

Inscription text	Description
TÜV 07 ATEX 554086 X IECEx TUN 09.0001X TÜV 12 ATEX 106032 X IECEx TUN 12.0039 X	Approving authority and certificate numbers
Dust	
II	Equipment group: All except mining
3(1)D	Category 3 (Zone 22) equipment containing a safety device for a category 1 (Zone 20) equipment
3(2)D	Category 3 (Zone 22) equipment containing a safety device for a category 2 (Zone 21) equipment
Ex	Explosion protection mark
tc Dc	Type of protection and equipment protection level (EPL): protection by enclosure
[ia Da]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety circuits for use in Zone 20
[ib Db]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety circuits for use in Zone 21
IIIC	Explosion group of dust
T 135°C	Max. surface temperature of the enclosure (without a dust layer)
Mining	
I	Equipment Group: Mining
M2 (M1)	Category: High level of protection with electrical circuits which present a very high level of protection
Ex d Mb	Explosion protection mark with Type of protection and equipment protection level (EPL): Flameproof enclosure
[ia Ma]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety electrical circuits
I	Explosion group for electrical equipment for mines susceptible to firedamp

Table 15: Description of marking example for approved Ex i I/O modules according to ATEX and IECEx

Gases	
II	Equipment group: All except mining
3(1)G	Category 3 (Zone 2) equipment containing a safety device for a category 1 (Zone 0) equipment
3(2)G	Category 3 (Zone 2) equipment containing a safety device for a category 2 (Zone 1) equipment
Ex	Explosion protection mark
nA Gc	Type of protection and equipment protection level (EPL): Non-sparking equipment
[ia Ga]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety circuits for use in Zone 0
[ia Gb]	Type of protection and equipment protection level (EPL): associated apparatus with intrinsic safety circuits for use in Zone 1
IIC	Explosion group of gas and vapours
T4	Temperature class: Max. surface temperature 135°C

7.1.2 Marking for America according to NEC 500

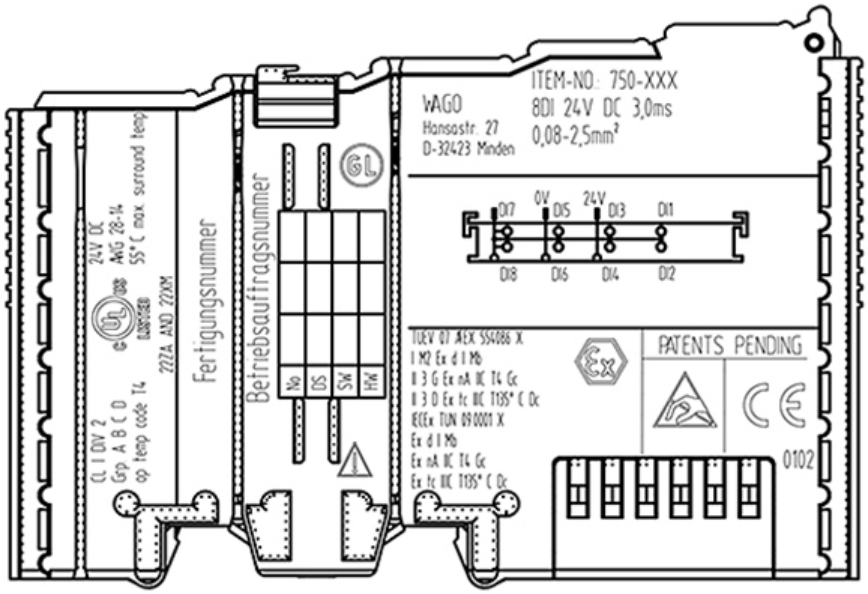


Figure 15: Side marking example for I/O modules according to NEC 500

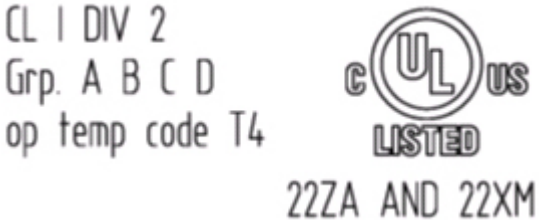


Figure 16: Text detail – Marking example for approved I/O modules according to NEC 500

Table 16: Description of marking example for approved I/O modules according to NEC 500

Printing on Text	Description
CL I	Explosion protection group (condition of use category)
DIV 2	Area of application
Grp. ABCD	Explosion group (gas group)
Op temp code T4	Temperature class

7.2 Installation Regulations

For the installation and operation of electrical equipment in hazardous areas, the valid national and international rules and regulations which are applicable at the installation location must be carefully followed.

7.2.1 Special conditions for safe use (ATEX Certificate TÜV 07 ATEX 554086 X)

1. For use as Gc- or Dc-apparatus (in zone 2 or 22) the Field bus Independent I/O Modules WAGO-I/O-SYSTEM 750-*** shall be erected in an enclosure that fulfils the requirements of the applicable standards (see the marking) EN 60079-0, EN 60079-11, EN 60079-15 and EN 60079-31.
   For use as group I electrical apparatus M2 the apparatus shall be erected in an enclosure that ensures a sufficient protection according to EN 60079-0 and EN 60079-1 and the degree of protection IP64.
   The compliance of these requirements and the correct installation into an enclosure or a control cabinet of the devices shall be certified by an ExNB.
2. Measures have to be taken outside of the device that the rating voltage is not being exceeded of more than 40 % because of transient disturbances.
3. Dip-switches, binary-switches and potentiometers, connected to the module may only be actuated when explosive atmosphere can be excluded.
4. The connecting and disconnecting of the non-intrinsically safe circuits is only permitted during installation, for maintenance or for repair purposes. The temporal coincidence of explosion hazardous atmosphere and installation, maintenance resp. repair purposes shall be excluded.
   This is although and in particular valid for the interfaces “Memory-Card”, “USB”, “Fieldbus connection”, “Configuration and programming interface”, “antenna socket”, “D-Sub”, “DVI-port” and the “Ethernet interface”. These interfaces are not energy limited or intrinsically safe circuits. An operating of those circuits is in the behalf of the operator.
5. For the types 750-606, 750-625/000-001, 750-487/003-000, 750-484 and 750-633 the following shall be considered: The Interface circuits shall be limited to overvoltage category I/II/III (non mains/mains circuits) as defined in EN 60664-1.
6. For replaceable fuses the following shall be considered: Do not remove or replace the fuse when the apparatus is energized.
7. The following warnings shall be placed nearby the unit:
   WARNING – DO NOT REMOVE OR REPLACE FUSE WHEN ENERGIZED
   WARNING – DO NOT SEPARATE WHEN ENERGIZED
   WARNING – SEPARATE ONLY IN A NON-HAZARDOUS AREA

7.2.2 Special conditions for safe use (ATEX Certificate TÜV 12 ATEX 106032 X)

1. For use as Gc- or Dc-apparatus (in zone 2 or 22) the Field bus Independent I/O Modules WAGO-I/O-SYSTEM 750-*** Ex i shall be erected in an enclosure that fulfils the requirements of the applicable standards (see the marking) EN 60079-0, EN 60079-11, EN 60079-15 and EN 60079-31.
   For use as group I electrical apparatus M2 the apparatus shall be erected in an enclosure that ensures a sufficient protection according to EN 60079-0 and EN 60079-1 and the degree of protection IP64.
   The compliance of these requirements and the correct installation into an enclosure or a control cabinet of the devices shall be certified by an ExNB.
2. Measures have to be taken outside of the device that the rating voltage is not being exceeded of more than 40 % because of transient disturbances.
3. The connecting and disconnecting of the non-intrinsically safe circuits is only permitted during installation, for maintenance or for repair purposes. The temporal coincidence of explosion hazardous atmosphere and installation, maintenance resp. repair purposes shall be excluded.
4. For the type the following shall be considered: The Interface circuits shall be limited to overvoltage category I/II/III (non mains/mains circuits) as defined in EN 60664-1.

7.2.3 Special conditions for safe use (IEC-Ex Certificate TUN 09.0001 X)

1. For use as Gc- or Dc-apparatus (in zone 2 or 22) the Field bus Independent I/O Modules WAGO-I/O-SYSTEM 750-*** shall be erected in an enclosure that fulfils the requirements of the applicable standards (see the marking) IEC 60079-0, IEC 60079-11, IEC 60079-15 and IEC 60079-31.
   For use as group I electrical apparatus M2 the apparatus shall be erected in an enclosure that ensures a sufficient protection according to IEC 60079-0 and IEC 60079-1 and the degree of protection IP64.
   The compliance of these requirements and the correct installation into an enclosure or a control cabinet of the devices shall be certified by an ExCB.
2. Measures have to be taken outside of the device that the rating voltage is not being exceeded of more than 40 % because of transient disturbances.
3. DIP-switches, binary-switches and potentiometers, connected to the module may only be actuated when explosive atmosphere can be excluded.
4. The connecting and disconnecting of the non-intrinsically safe circuits is only permitted during installation, for maintenance or for repair purposes. The temporal coincidence of explosion hazardous atmosphere and installation, maintenance resp. repair purposes shall be excluded.
   This is although and in particular valid for the interfaces “Memory-Card”, “USB”, “Fieldbus connection”, “Configuration and programming interface”, “antenna socket”, “D-Sub”, “DVI-port” and the “Ethernet interface”. These interfaces are not energy limited or intrinsically safe circuits. An operating of those circuits is in the behalf of the operator.
5. For the types 750-606, 750-625/000-001, 750-487/003-000, 750-484 and 750-633 the following shall be considered: The Interface circuits shall be limited to overvoltage category I/II/III (non mains/mains circuits) as defined in IEC 60664-1.
6. For replaceable fuses the following shall be considered: Do not remove or replace the fuse when the apparatus is energized.
7. The following warnings shall be placed nearby the unit:
   WARNING – DO NOT REMOVE OR REPLACE FUSE WHEN ENERGIZED
   WARNING – DO NOT SEPARATE WHEN ENERGIZED
   WARNING – SEPARATE ONLY IN A NON-HAZARDOUS AREA

7.2.4 Special conditions for safe use (IEC-Ex Certificate IECEx TUN 12.0039 X)

1. For use as Gc- or Dc-apparatus (in zone 2 or 22) the Field bus independent I/O Modules WAGO-I/O-SYSTEM 750-*** Ex i shall be erected in an enclosure that fulfils the requirements of the applicable standards (see the marking) IEC 60079-0, IEC 60079-11, IEC 60079-15, IEC 60079-31.
   For use as group I electrical apparatus M2 the apparatus shall be erected in an enclosure that ensures a sufficient protection according to IEC 60079-0 and IEC 60079-1 and the degree of protection IP64.
   The compliance of these requirements and the correct installation into an enclosure or a control cabinet of the devices shall be certified by an ExCB.
2. Measures have to be taken outside of the device that the rating voltage is not being exceeded of more than 40 % because of transient disturbances.
3. The connecting and disconnecting of the non-intrinsically safe circuits is only permitted during installation, for maintenance or for repair purposes. The temporal coincidence of explosion hazardous atmosphere and installation, maintenance resp. repair purposes shall be excluded.
4. For the type the following shall be considered: The Interface circuits shall be limited to overvoltage category I/II/III (non mains/mains circuits) as defined in IEC 60664-1.

7.2.5 ANSI/ISA 12.12.01

A. “This equipment is suitable for use in Class I, Division 2, Groups A, B, C, D or non-hazardous locations only.”
B. “This equipment is to be fitted within tool-secured enclosures only.”
C. “WARNING Explosion hazard - substitution of components may impair suitability for Class I, Div. 2.”
D. “WARNING – Do not disconnect equipment unless power has been switched off or the area is known to be non-hazardous” has to be placed near each operator accessible connector and fuse holder.
E. When a fuse is provided, the following information shall be provided: “A switch suitable for the location where the equipment is installed shall be provided to remove the power from the fuse.”
F. For devices with EtherCAT/Ethernet connectors “Only for use in LAN, not for connection to telecommunication circuits.”
G. “WARNING - Use Module 750-642 only with antenna module 758-910.”
H. For Couplers/Controllers and Economy bus modules only: The instructions shall contain the following: “The configuration interface Service connector is for temporary connection only. Do not connect or disconnect unless the area is known to be non-hazardous. Connection or disconnection in an explosive atmosphere could result in an explosion.”
I. Modules containing fuses only: “WARNING - Devices containing fuses must not be fitted into circuits subject to over loads, e.g. motor circuits.”
J. Modules containing SD card reader sockets only: “WARNING - Do not connect or disconnect SD-Card while circuit is live unless the area is known to be free of ignitable concentrations of flammable gases or vapors.”



Information

Additional Information

Proof of certification is available on request. Also take note of the information given on the module technical information sheet. The Instruction Manual, containing these special conditions for safe use, must be readily available to the user.

List of Figures

Figure 1: View 15
Figure 2: Data contacts 16
Figure 3: Power jumper contacts 17
Figure 4: Connections 19
Figure 5: Display elements 20
Figure 6: Schematic diagram 21
Figure 7: Insert I/O module 27
Figure 8: Snap the I/O module into place 27
Figure 9: Removing the I/O module 28
Figure 10: Connecting a conductor to a CAGE CLAMP® S 29
Figure 11: Side marking example for approved I/O modules according to ATEX and IECEx 32
Figure 12: Printing Text detail – Marking example for approved I/O modules according to ATEX and IECEx. 32
Figure 13: Side marking example for approved Ex i I/O modules according to ATEX and IECEx. 34
Figure 14: Text detail – Marking example for approved Ex i I/O modules according to ATEX and IECEx. 34
Figure 15: Side marking example for I/O modules according to NEC 500 37
Figure 16: Text detail – Marking example for approved I/O modules according to NEC 500 37

List of Tables

Table 1: Number notation ... 8
Table 2: Font conventions ... 8
Table 3: Caption acc. to figure “View” ... 15
Table 4: Caption acc. to view “Power jumper contacts” ... 17
Table 5: Caption acc. to figure „Connections“ ... 19
Table 6: Display Elements ... 20
Table 7: Technical data device ... 22
Table 8: Technical data communication ... 22
Table 9: Technical data supply ... 22
Table 10: Technical data inputs ... 22
Table 11: Technical Data Wire Connection ... 23
Table 12: Input bits 0 … 7 ... 30
Table 13: Input bits 8 … 15 ... 30
Table 14: Description of marking example for approved I/O modules according to ATEX and IECEx ... 33
Table 15: Description of marking example for approved Ex i I/O modules according to ATEX and IECEx ... 35
Table 16: Description of marking example for approved I/O modules according to NEC 500 ... 37

WAGO Kontakttechnik GmbH & Co. KG
Postfach 2880 • D-32385 Minden
Hansastraße 27 • D-32423 Minden
Phone: +49/5 71/8 87 – 0
Fax: +49/5 71/8 87 – 1 69
E-Mail: info@wago.com

Internet: http://www.wago.com