

TOPJOB®S
Fuse Disconnect Terminal Blocks with Pivoting Fuse Holder for Miniature Metric Fuses 5 x 20 mm, 5 x 30 mm, ¼" x1¼", 2006 Series

CAGE CLAMP®S

0.5 - 6 (10) mm² ❶ | AWG 20 - 8 800 V/8 kV/3 ❷ | 600 V, 15 A I_N 10 A Terminal block width 7.5 mm / 0.295 in 13 - 15 mm / 0.55 in ❸	0.5 - 6 (10) mm² ❶ | AWG 20 - 8 800 V/8 kV/3 ❷ I_N 10 A Terminal block width 7.5 mm / 0.295 in 13 - 15 mm / 0.55 in ❸

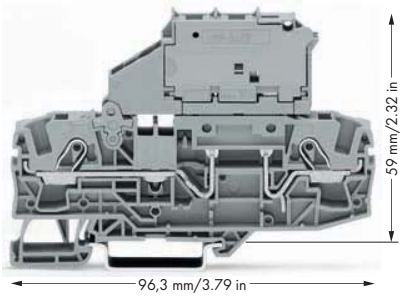

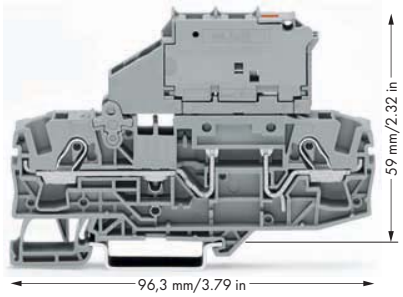

❶ Conductor sizes: 0.5 mm² – 10 mm² "s + f-st"; Push-in conductor sizes: 1 mm² – 10 mm² "s" and 1.5 mm² – 6 mm² "insulated ferrule, 12 mm"


❷ 800 V = rated voltage
8 kV = rated surge voltage
3 = pollution degree
(see Section 14)


❸ Strip length, see packaging or instructions.

❹ See application notes for:
Star point jumper, page 140

	Item No.	Pack. Unit
2-conductor fuse disconnect terminal block with pivoting fuse holder,		
without blown fuse indication		
Nominal voltage and current are given by the fuse.		
for miniature metric fuses 5 x 20 mm		
gray	**2006-1611**	25
for miniature metric fuses 5 x 30 mm		
gray	**2006-1621**	25
for miniature metric fuses 1/4" x 11/4"		
gray	**2006-1631**	25

	Item No.	Pack. Unit
2-conductor fuse disconnect terminal block with pivoting fuse holder, gray,		
with blown fuse indication by LED		
Nominal voltage and current are given by the LED or fuse.		
Leakage current in case of blown fuse: LED 2 mA,		
for miniature metric fuses 5 x 20 mm		
12 - 30 V	**2006-1611/1000-541**	25
30 - 65 V	**2006-1611/1000-542**	25
120 V	**2006-1611/1000-867**	25
230 V	**2006-1611/1000-836**	25
for miniature metric fuses 5 x 30 mm		
12 - 30 V	**2006-1621/1000-541**	25
30 - 65 V	**2006-1621/1000-542**	25
120 V	**2006-1621/1000-867**	25
230 V	**2006-1621/1000-836**	25
380 - 500 V	**2006-1621/1000-859**	25
for miniature metric fuses 1/4" x 11/4"		
12 - 30 V	**2006-1631/1000-541**	25
30 - 65 V	**2006-1631/1000-542**	25
120 V	**2006-1631/1000-867**	25
230 V	**2006-1631/1000-836**	25
380 - 500 V	**2006-1631/1000-859**	25

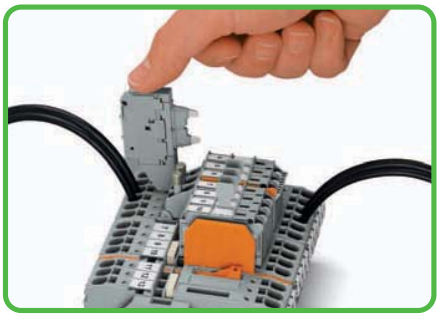
Pivoting the fuse holder in the locked open position.

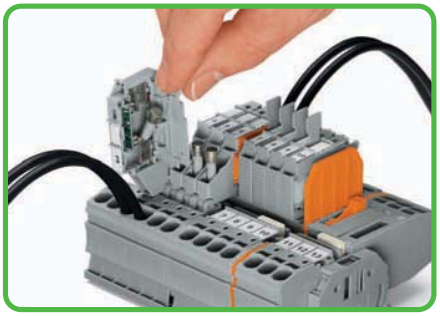
Opening the cover to replace the fuse.

2006 Series Accessories

Appropriate marking systems: WMB/Marking strips (see Section 13)

End and intermediate plate, 1 mm thick			
orange	**2006-1692**	100 (4x25)	
gray	**2006-1691**	100 (4x25)	
End plate for fuse terminal blocks,			
2 mm thick			
orange	**2006-992**	100 (4x25)	
gray	**2006-991**	100 (4x25)	
Push-in type jumper bar, insulated,			
I_N 41 A,			
light gray			
2-way	**2006-402**	50 (2x25)	
3-way	**2006-403**	50 (2x25)	
4-way	**2006-404**	50 (2x25)	
5-way	**2006-405**	50 (2x25)	
Star point jumper, insulated, ❹			
I_N = I_N terminal block, light gray			
1-3-5	**2006-405/011-000**	50 (2x25)	

Push-in type jumper bar, insulated,			
I_N 41 A,			
light gray			
from 1 to 3	**2006-433**	50 (2x25)	
from 1 to 4	**2006-434**	50 (2x25)	
from 1 to 5	**2006-435**	50 (2x25)	
Protective warning marker,			
with high-voltage symbol, black,			
for 5 terminal blocks			
yellow	**2006-115**	100 (4x25)	
Test plug,			
with 500 mm cable,			
2 mm Ø			
red	**210-136**	50	
WMB Multi marking system,			
10 strips with 10 markers per card,			
stretchable 5 - 5.2 mm			
plain	**793-5501**	5	

For list of approvals and user guide, see pages 634 to 637.